
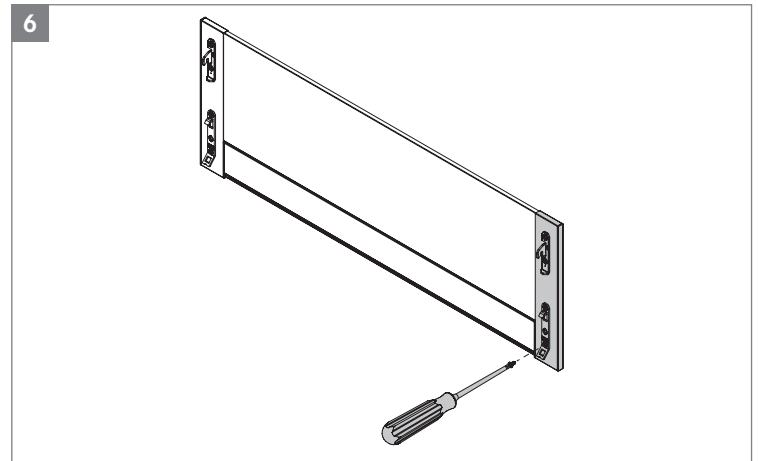
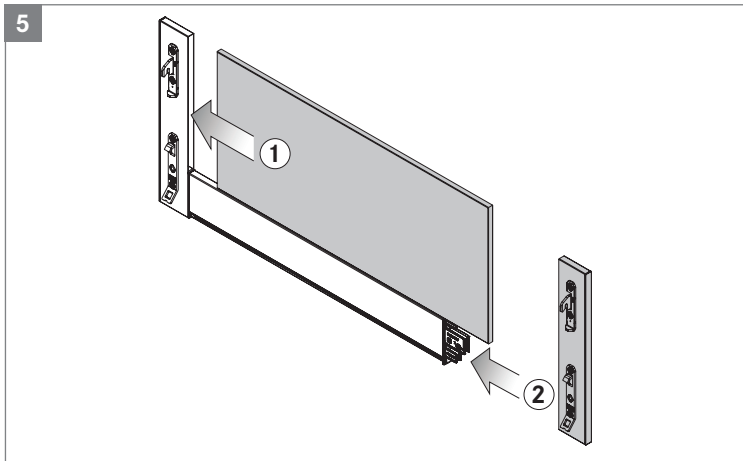
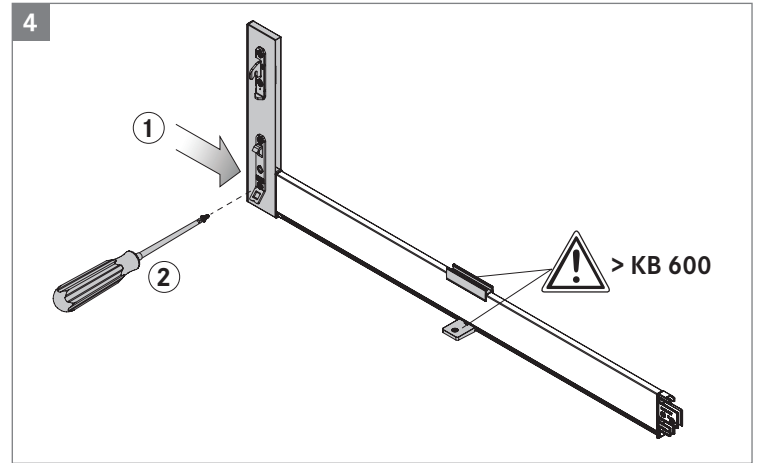
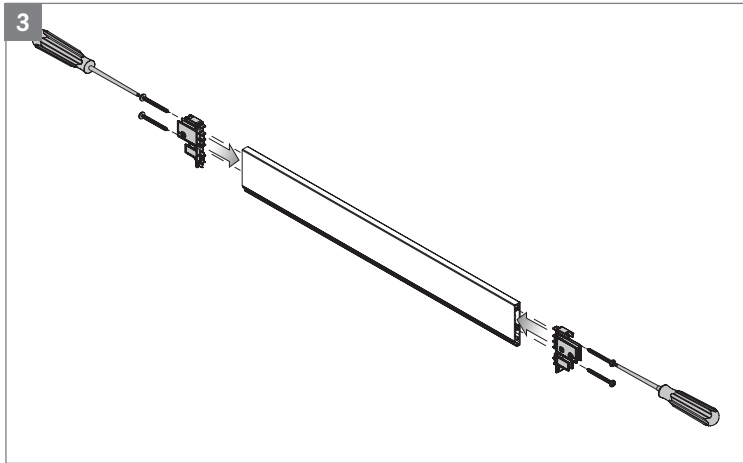
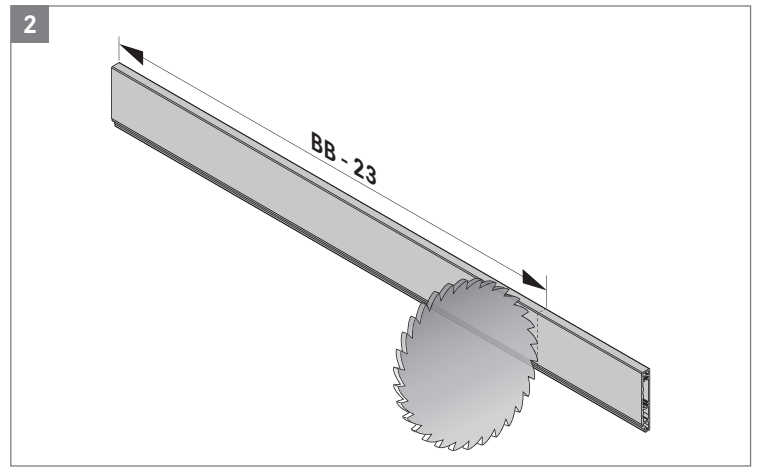
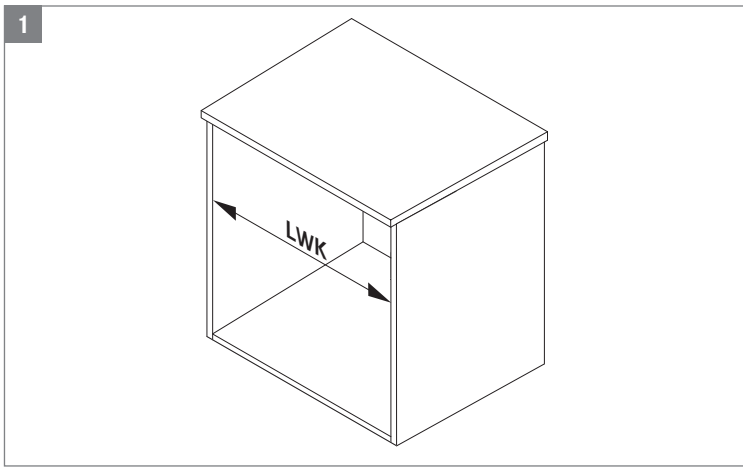
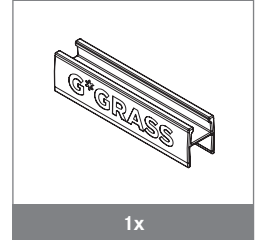
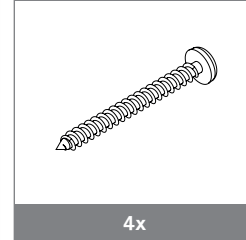
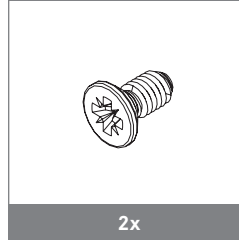
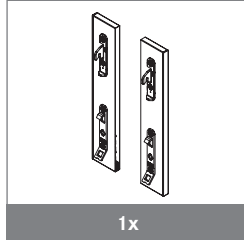
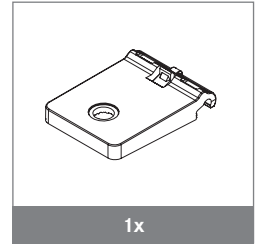
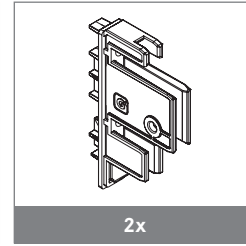
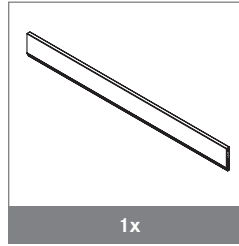
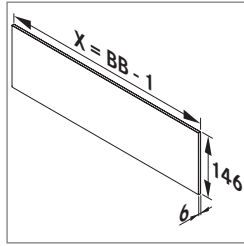


NOVA PRO F8 CRYSTAL

Montage/Assembly/Montage/Montaggio/Montaje/Monteringsanvisning/Монтаж

119388 - 12/2020

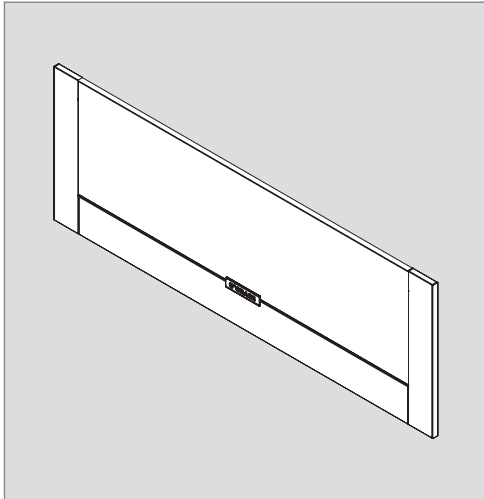

















KB Korpusbreite/Cabinet width/Largeur du caisson/Larghezza del mobile/Ancho del módulo/Skåpsbredd/Ширина корпуса

LWK Lichte Weite Korpus/Inside cabinet width/Largeur intérieure caisson/Luce libera mobile/Ancho interior del módulo/Innermått skåp/Внутренняя ширина корпуса

NOVA PRO F8 CRYSTAL

Montage/Assembly/Montage/Montaggio/Montaje/Monteringsanvisning/Монтаж

119388 - 12/2020

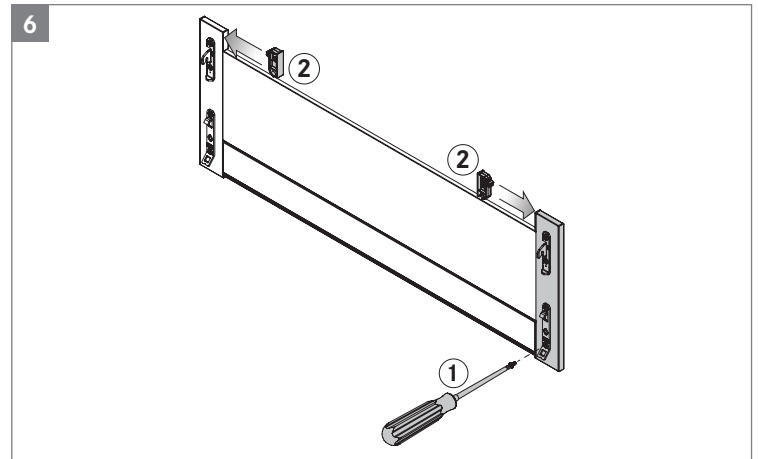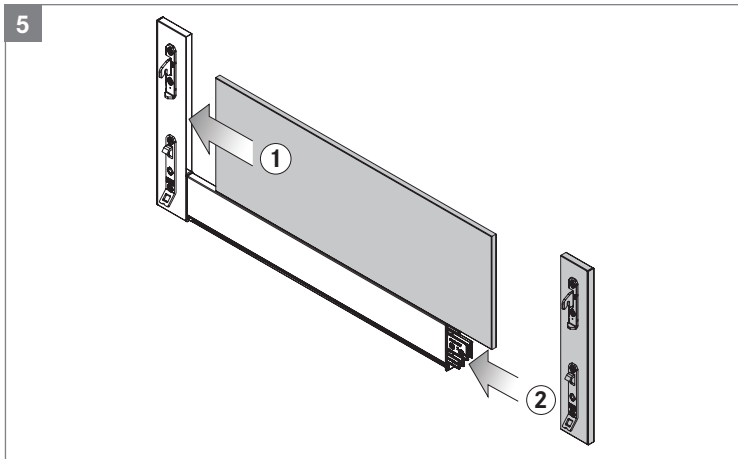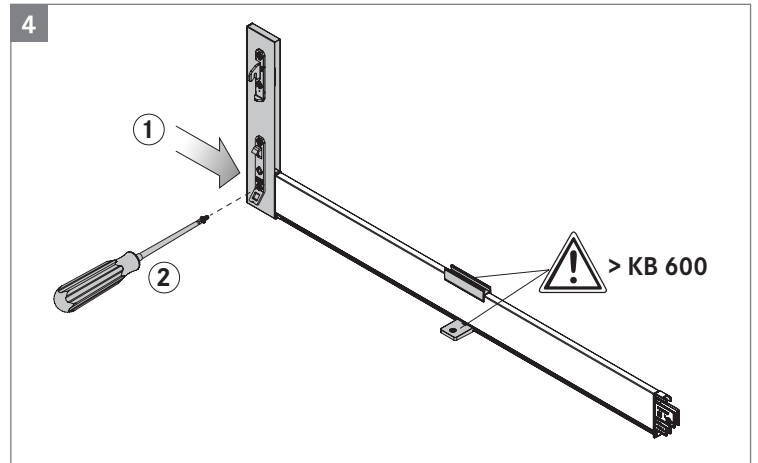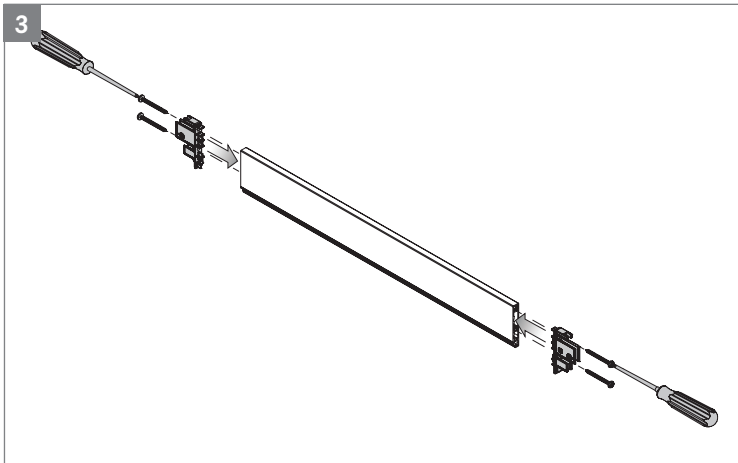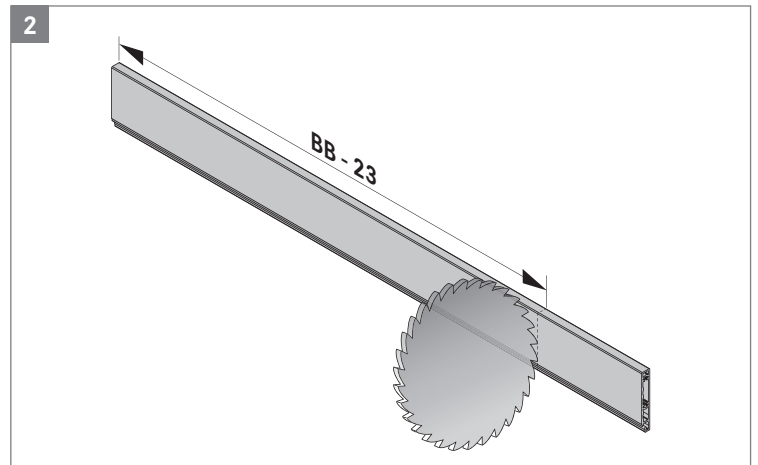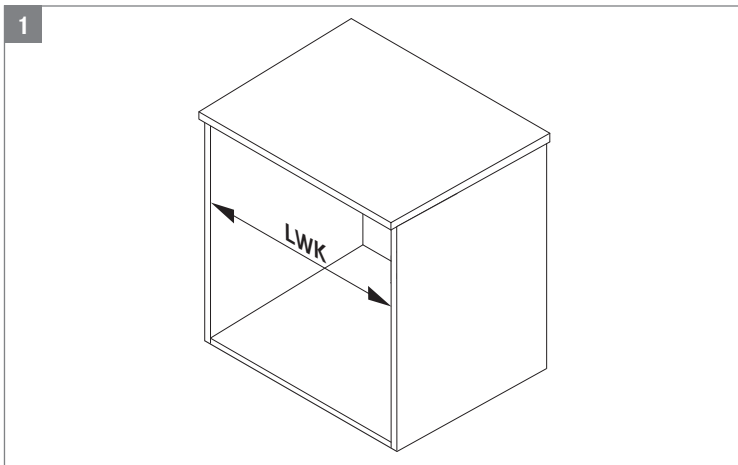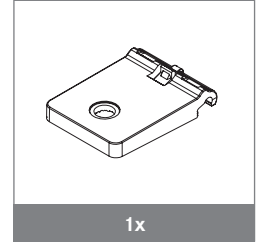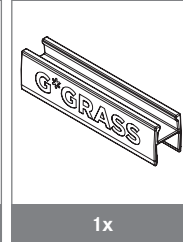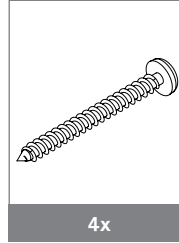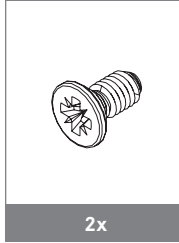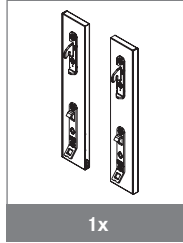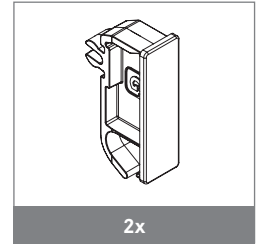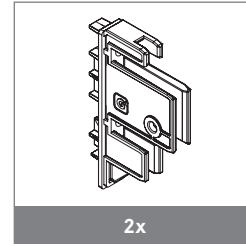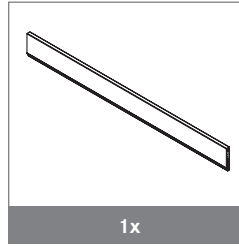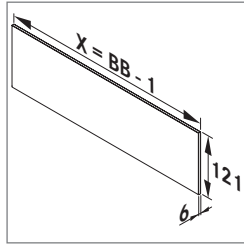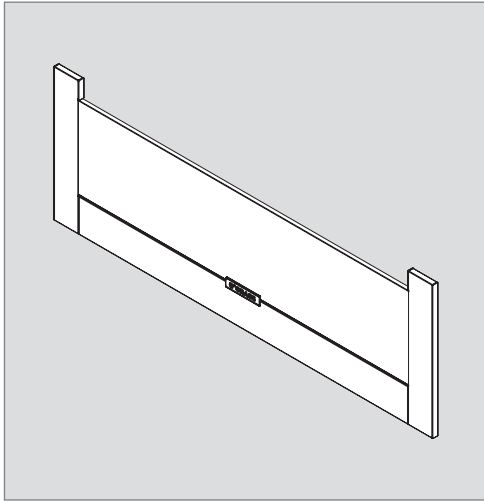

KB **Korpusbreite**/Cabinet width/Largeur du caisson/Larghezza del mobile/Ancho del módulo/Skåpsbredd/Ширина корпуса

LWK **Lichte Weite Korpus**/Inside cabinet width/Largeur intérieure caisson/Luce libera mobile/Ancho interior del módulo/Innermått skåp/Внутренняя ширина корпуса